


CONTAMINATION PREVENTION RESERVOIR PACKAGE OPERATING INSTRUCTIONS

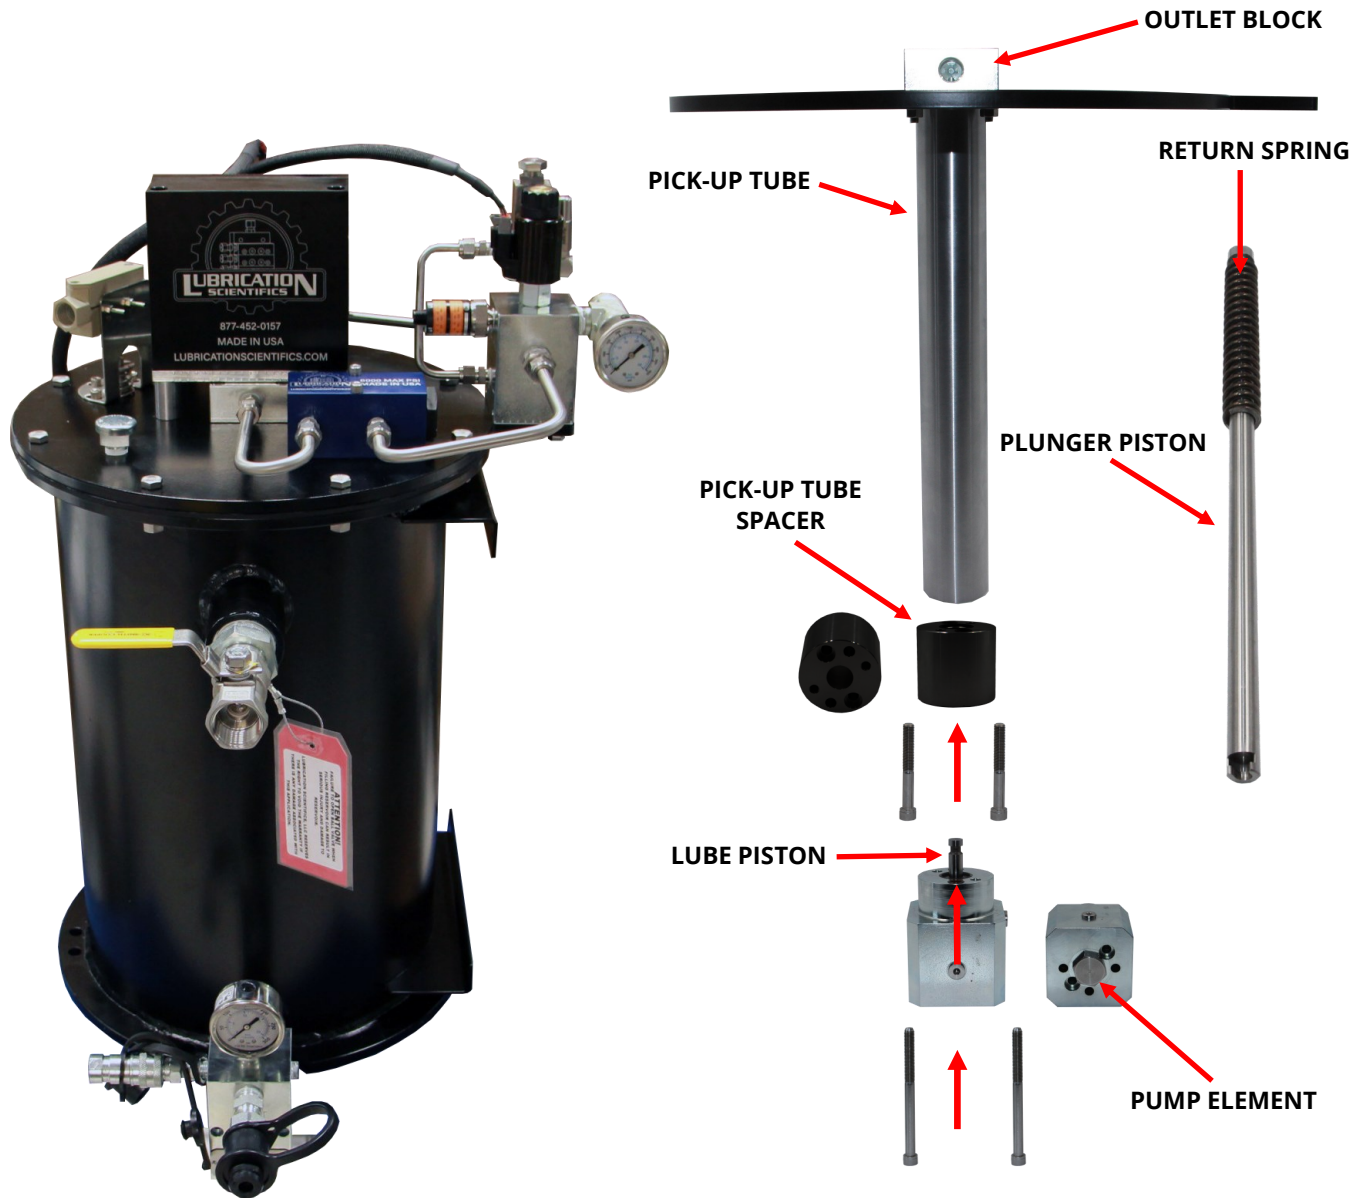

1. Open overfill relief ball valve on side of reservoir.
2. Fill reservoir with lubricant via filter on bottom of reservoir.
3. Close overfill relief ball valve.
4. Remove outlet line and energize pump. Make sure all air has been expelled and even lubricant flow is achieved.
5. Reattach outlet line. Never allow pump to run out of lubricant. Monitor Lubricant level and refill when necessary.